


the easy load pivoting clothes dryer

product
manual

single & double
clothes dryer packs

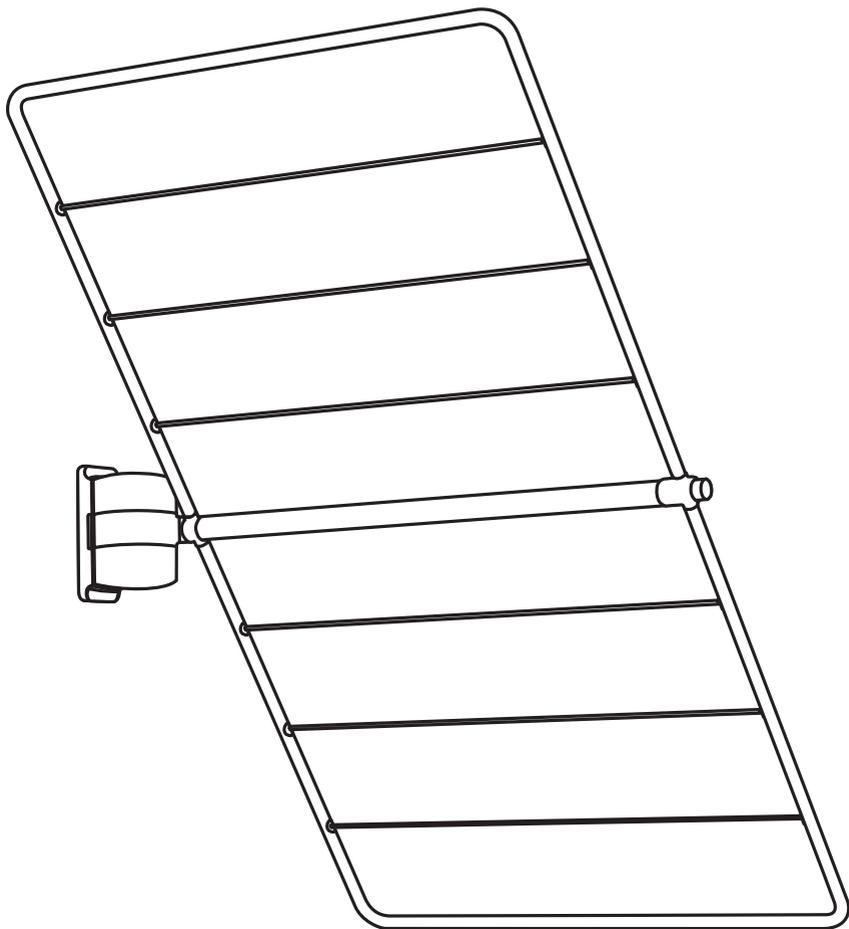

HILLS.TM

Congratulations

Congratulations on the purchase of your Hills Pivoting Clothes Dryer which will bring you many years of trouble free and efficient drying.

Your Pivoting Clothes Dryer can be either wall or post mounted.

It's important that you read this Product Manual thoroughly before installation to benefit from the design features and enjoy safe use of this product.

Thank you for choosing Hills.

Patents and Registered Designs apply to this product.

Warning

- Do not allow children or pets to swing or climb on the clothes dryer or items of laundry.
- Ensure when swinging and pivoting your clothesline that bystanders (in particular children) are standing well clear.
- Do not use for any purpose other than to hang and dry washing.
- Do not use your clothes dryer if parts are worn or damaged.
- Do not allow the frame to pivot in an uncontrolled manner as damage or injury may result.

Please retain this Product Manual. Record the following information for future reference.

Product Number (printed on carton): _____

Date of purchase: _____

Name and location of store: _____




Designed and tested under a
Quality System that meets Hills
demanding quality specifications.

Made in China

Carton Contents

Check all components are supplied in your carton. Refer to the chart below for quantities.

	Pivoting Clothes Dryer	Single	Double
1	Mount Bracket & Frame Assembly	1	2
2	Upper Frame	1	2
3	Cover Caps	2	4
4	Frame Fasteners	2	4
5	Drilling Template	1	1

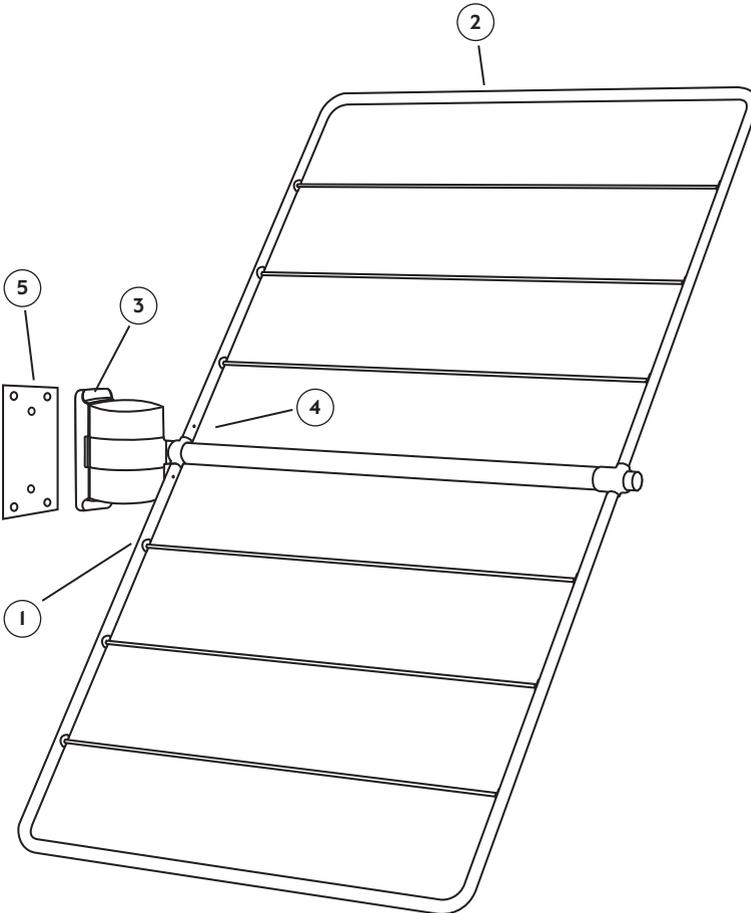

Step I – Select a suitable location

- Your Pivoting Clothes Dryer can be mounted to either a wall or post.
- You must check to ensure you have sufficient space in your garden / yard to install your clothes dryer. Refer **Fig. 1**.



This clothes dryer can also be installed indoors.

- We recommend mounting at a height approximately level with the shoulder height of the intended user. Refer **Fig. 4**.

Product dimensions (maximum open position):

Product	Width	Height	Depth from Wall
Single	665mm (26.2")	1155mm (45.5")	845mm (33.3")
Double (compact)	930mm (36.6")	1155mm (45.5")	845mm (33.3")
Double (offset)	665mm (26.2")	1155mm (45.5")	845mm (33.3")

Fig. 1 Single Installation

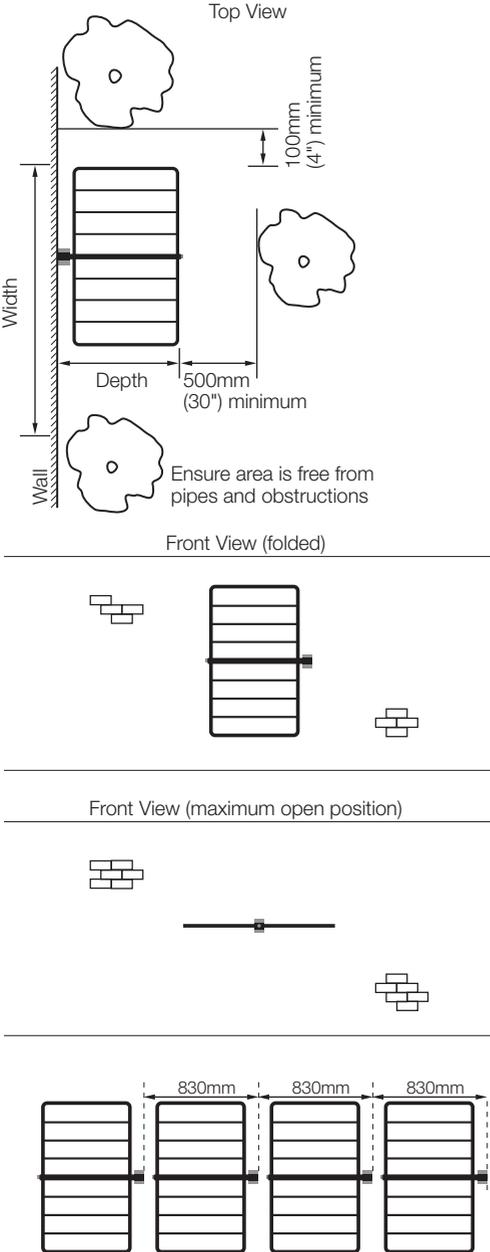


Fig. 2 Compact Installation



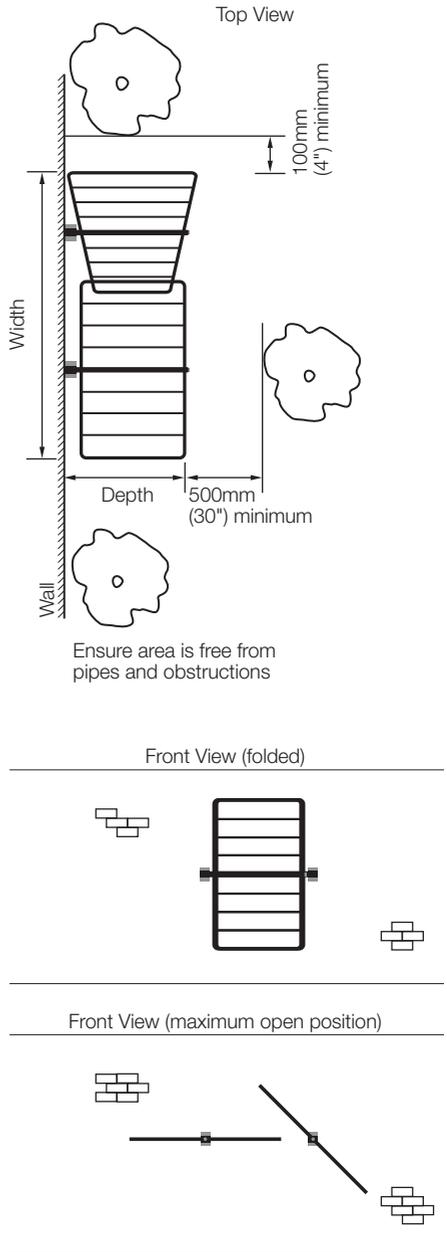


Fig. 3 Offset Installation

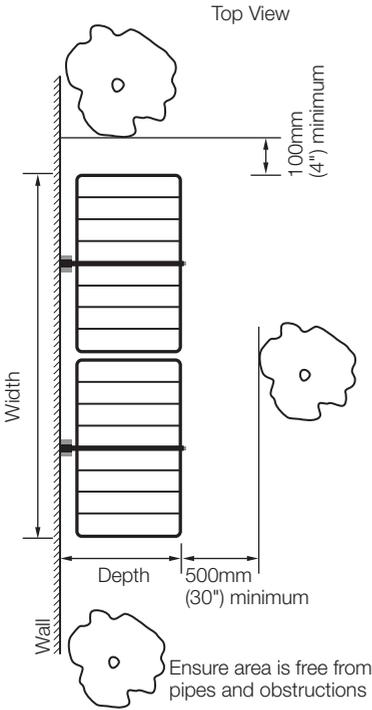


Front View (folded)

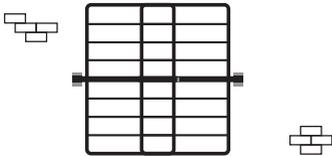

Front View (maximum open position)



Fig. 4

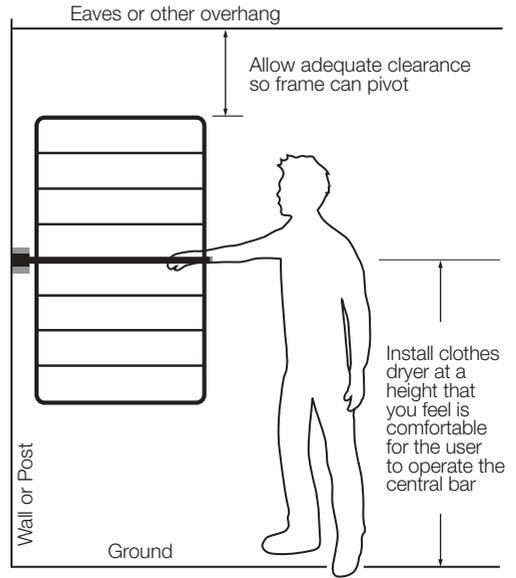

Step 2 – Installing your mount brackets

The following instructions are provided for installing your mount brackets to either;

- Brick or masonry walls (step 3)
- Stud walls and posts (step 4)



Due to the range of wall construction materials available, or if you have any doubt, consult your local hardware store.



If installing a double pack or multiple units;

- Install the left hand bracket first and use this to get your correct installation width for the right hand bracket.
- Hold RH bracket against the wall, making sure it is aligned vertically and horizontally, and use it as a template to mark where to drill holes, (a spirit level and straight edge will help).
- User's shoulder height to equal the middle of the bracket.


Product	Mount Hole Centres
Single	N/A
Compact	830mm (32.7")
Offset	1200mm (47.2")

Step 3 – Fixing to a brick or masonry wall

3.1 Double check to ensure you have sufficient clearance and the area is free from pipes and other obstructions.

3.2 Mark the position of the mount bracket hole centres on the wall using the provided drilling template.

For sound brick/masonry walls, we recommend using appropriate flush head 10mm diameter fasteners.

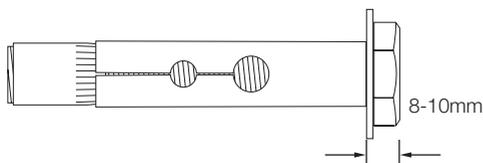

Ensure the head of the bolts do not protrude more than 8-10mm.

3.3 Drill appropriately sized holes in your wall to suit the fasteners being used. Refer **Fig. 5**.

3.4 Clear holes of dust and debris before inserting fastener. Refer **Fig. 6**.



When attaching the mount bracket and frame assembly, ensure the pre-assembled frame is on the bottom.

Fig. 5


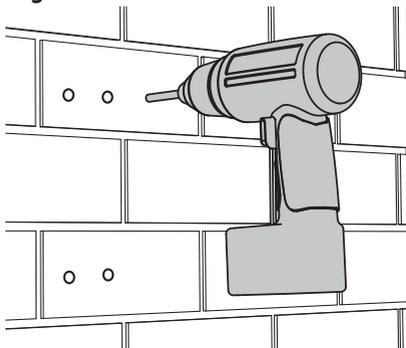


Fig. 6

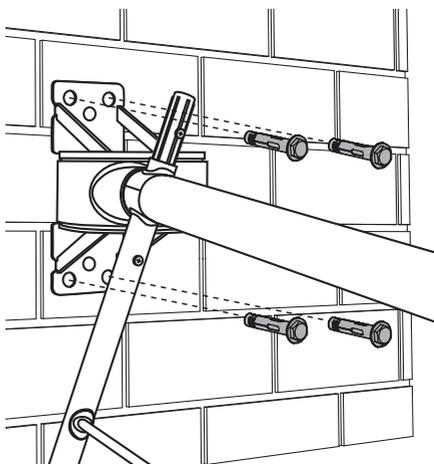

Mount bracket and frame assembly

Step 4 – Fixing to a stud wall or post

- 4.1** Double check to ensure you have sufficient clearance and the area is free from pipes and other obstructions.
- 4.2** Locate the vertical studs in your wall and mark each side of the stud so you know where to drill.



Note: You may not be able to install your double pack in the same configuration as per page 5 as stud distances will dictate space between the frames. Refer **Fig. 7**.

- 4.3** Mark the position of the mount bracket's hole centres on the wall using the template provided. Refer **Fig. 8**.

Fig. 7 Stud centres will dictate double pack installation


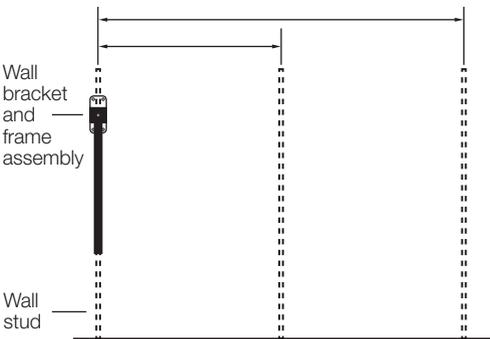


Fig. 8



- 4.4** Drill the correct size pilot holes in your wall to suit the fasteners being used.
- For timber stud walls we recommend using four 8mm (5/16") x 75mm (3") long wood screws.
 - For other stud and wall construction materials we recommend you consult your local hardware store for the appropriate fasteners.
 - When drilling into timber studs, always drill a pilot hole to reduce the chance of the studs splitting.

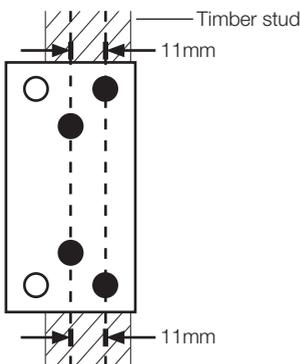

It is critical that your mount brackets are securely fastened to the vertical studs in your wall. Appropriate fasteners must be used, strong enough to support full loads of wet washing.



Use the middle holes and one of the top holes on the bracket to ensure two screws are used for each of the top and bottom brackets.



If you are concerned about the bracket assembly marking your plasterboard wall, we recommend adding a timber packer between the wall and your brackets to protect the wall.

Step 5 – Attaching the top frame

- 5.1 Slide the top frame onto the two spigots exposed on the central bar. Refer **Fig. 9**.
- 5.2 Using the fasteners provided, secure the top frame to the central bar assembly.



Note: End of the top frame needs to be secured with a fastener.



Extra screws have been included for your convenience.

Fig. 9


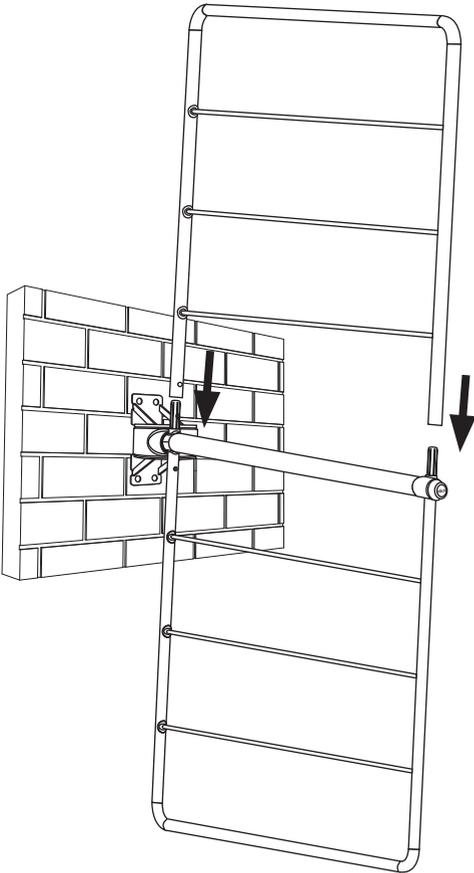



Fig. 10

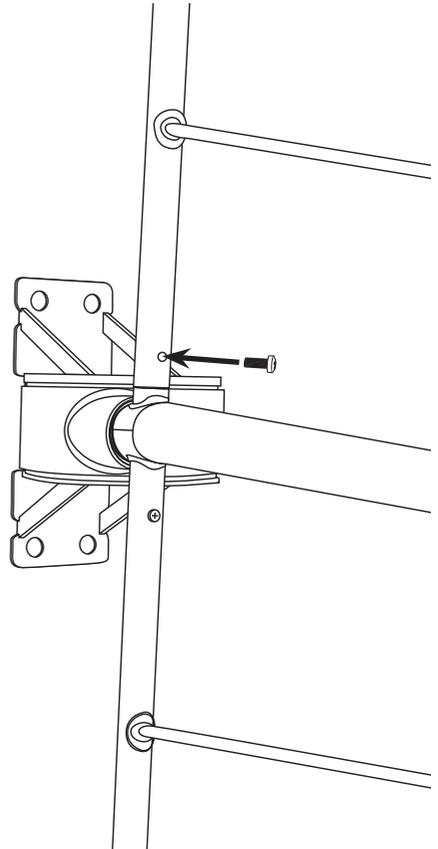

Step 6 – Attach covers

- 6.1 Snap the covers onto the wall bracket to complete the installation. Refer **Fig. II**.


Fig. II

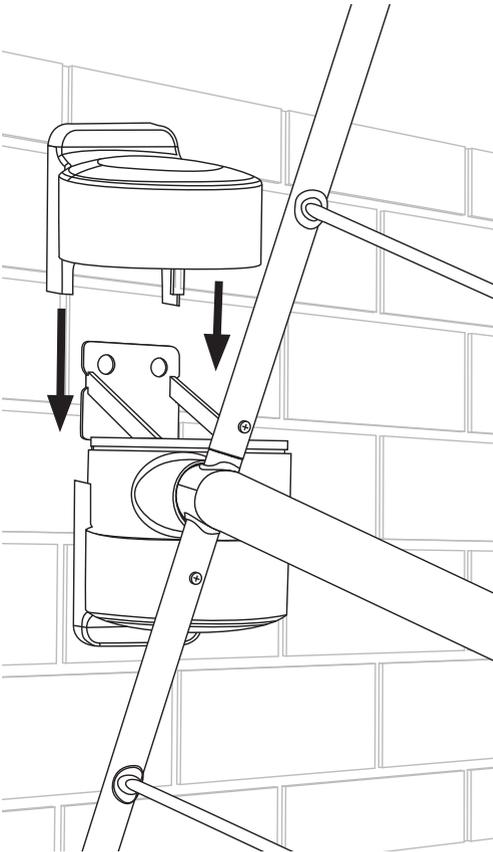

Step 7 – Operating your clothes dryer

- 7.1 Pivot your clothes dryer 90° out from the wall. Refer **Fig. 12**.

Fig. 12

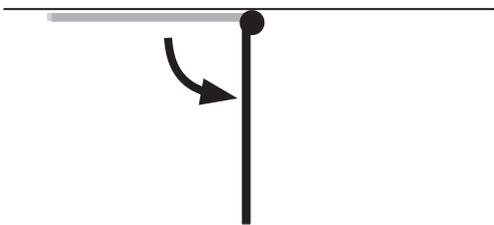

- If you have a double pivoting pack, pivot the outside frame first before pivoting your second frame. Refer **Fig. 13**.

Fig. 13



- 7.2 To load the clothes onto the product rotate the frame anti-clockwise to the horizontal (or loading) position. Refer **Fig. 15**.

To do this press the release button at the end of the central bar. Refer **Fig. 14**.

Fig. 14


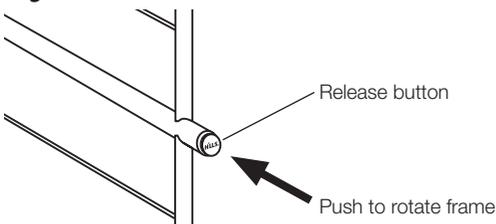


Fig. 15



- 7.3 Once clothesline is loaded with washing it is time to move to the drying position.

Again pressing the release button rotate the frame clockwise to the preset drying position of 35°. Refer **Fig. 16**.

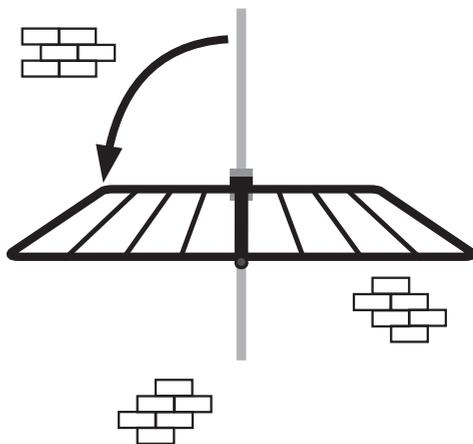

Note if washing is heavy we recommend using both hands to rotate the frame.



If you find it hard to press the release button, use two hands to steady the frame so it is horizontal and press the release button again.




You can leave the clothesline in the horizontal drying position if you prefer this orientation.



Hills also offer a specialised delicates drying mat for the pivoting frame clothes dryer. This mat allows you to dry items flat and prevents water from dripping on the ground.

Fig. 16

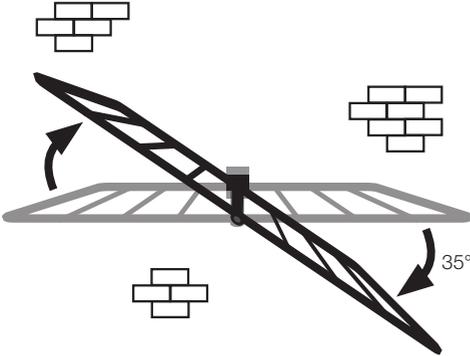

Care and Maintenance

- Regularly inspect all components and check for wear and tear or damage. Ensure fasteners are secure. If there is any damage, parts should be replaced with original Hills spares. The clothes dryer should be repaired before using again.
- Your clothes dryer should be periodically wiped clean with a damp cloth and mild detergent.
- Your clothes dryer should be easy to operate, but if left for a period of time it may become more difficult. It is recommended that the clothes dryer be operated regularly.
- We do not recommend the use of oil or 'WD' type lubricants on any part of the clothes dryer.
- Wipe away any dirt and dust from the clothes dryer with a damp cloth once a month. More regularly in dusty conditions.
- To maintain appearance and durability of coating on metal components we recommend a twice yearly application of a reputable brand of car polish or wax.

1. Hills provides consumers with the following warranty in relation to this Product, in addition to complying with the requirements of any relevant legislation, including the Competition and Consumer Act 2010 (Cth) in Australia and the Consumer Guarantees Act 1993 in New Zealand (the **Acts**), except where a New Zealand consumer acquires the relevant Product for the purposes of a business.
2. In this warranty, we have used the following definitions:
 - (a) **Hills, our or we** means Hills Limited (ABN 35 007 573 417) of 159 Port Road Hindmarsh South Australia 5007;
 - (b) **Products** means the following goods manufactured by Hills (including products manufactured for Hills by its contract manufacturers):
Hills Pivoting Frame Clothes Dryer;
 - (c) **Material** means a material or component used by Hills in the manufacture of the Products;
 - (d) **Warranty Period** means 5 years from the date of purchase of the relevant Product. If the Product or part (as the case may be) is repaired or replaced, there will be no extension to the original warranty period; and
 - (e) **Workmanship** means the handling, assembly and manufacturing processes performed by or on behalf of Hills in order to manufacture the Products.
3. Hills warrants that for the duration of the Warranty Period, all Products will be free of faults arising from defects in Workmanship or Materials, on the terms and conditions set out in this warranty.
4. Hills undertakes that if during the Warranty Period any Product, or any part of a Product, has failed to operate correctly due to faulty Workmanship or defective Material, it will repair or replace the Product or part (as the case may be) free of charge provided that the following procedure is met:
 - (a) The consumer must contact Hills upon becoming aware of any defect to a Product. The contact details for Hills are set out in this warranty and under the heading "Hills Contacts".
 - (b) Following consultation with Hills, Hills will determine whether there is a defect, and if so Hills agrees to (at Hills' option):
 - i. in the case of goods – repair, replace or supply equivalent goods, or pay the cost of any of those remedies to the consumer; or
 - ii. in the case of services – supply the services again or pay the cost of having the services supplied again.
 - (c) If Hills requests the return of the applicable Product or part, Hills will be responsible for the collection and freight costs of returning that Product or part. The consumer agrees to assist Hills with any reasonable request to enable Hills to collect such Product or part.
 - (d) Hills also agrees to be responsible for the freight costs to deliver any new Product or replacement part to the consumer.
5. This warranty is in addition to any non-excludable legal rights or remedies conferred on the consumer under any applicable Act and any similar laws. To the extent permitted by law, Hills' liability for any non-excludable condition or warranty is limited to rectifying any defect at its option, as set out in paragraph 4(b).

6. Subject to the requirements of any applicable Act or legislation and to the extent permitted by law, no liability (whether expressed or implied) of any nature whatsoever, is accepted by Hills for any consequential loss, damage or injury arising as a result of any fault in the Products.
7. This warranty does not extend to damage to Products which occurs during transit or transportation, or which is caused by any abuse, accident or improper installation, connection, use, adjustment or repair or use of goods otherwise than in accordance with instructions issued by Hills.
8. The warranty on Products is waived if any addition or attachment to the Products do not have Hills' specific approval or are not sold as Hills products. The Products are designed to perform specific tasks under established test loads and unauthorised attachments may produce stresses for which the design is not appropriate.
9. The following applies to consumers who purchased a relevant Product in Australia:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Hills Contacts

We are committed to providing you with complete customer satisfaction. If you have any questions or comments about our products or services please contact your nearest Customer Service Centre during their local business hours:

Australia

1300 300 564
info@hills.com.au

New Zealand

09 262 3052
sales@hills.co.nz

Rest of the World

Refer to Hills Website
hills.com.au/contact-us

Hills Websites

hillshome.com.au
Hills Branded Products

hillshome.com.au/contact
Hills Consumer Advice

hills.com.au
Hills Limited

Hills Limited

A.B.N. 35 007 573 417

Issue April 2014

PD4960a

