



Step 1: Lay the clotheslines on the ground, loose 4 screws in the top cover

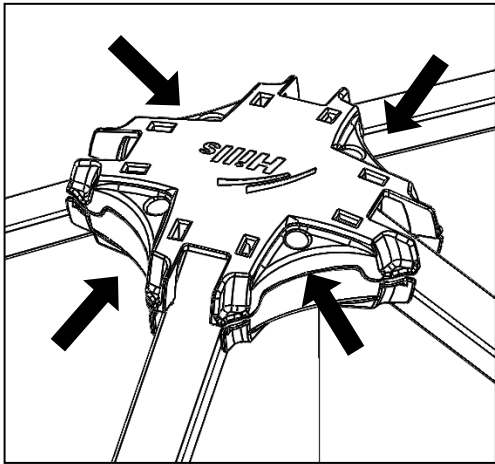

Step 2: Lower the bottom cover, loose two screws on the main standard

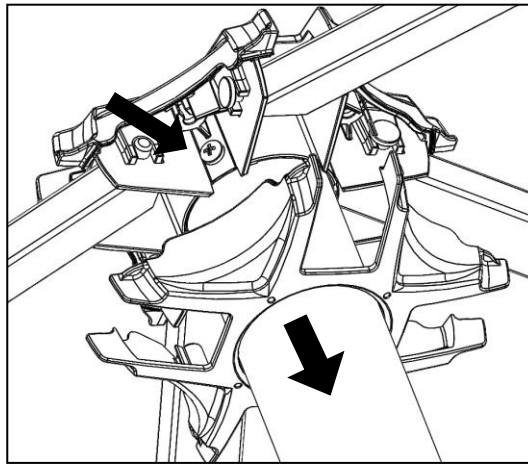

Step 3 : Remove 4 locking pins and depart the arm stays from the top cover

