


Hills® Supa™ Fold

Folding Frame Clothesline Strut Assembly Pack Product Manual

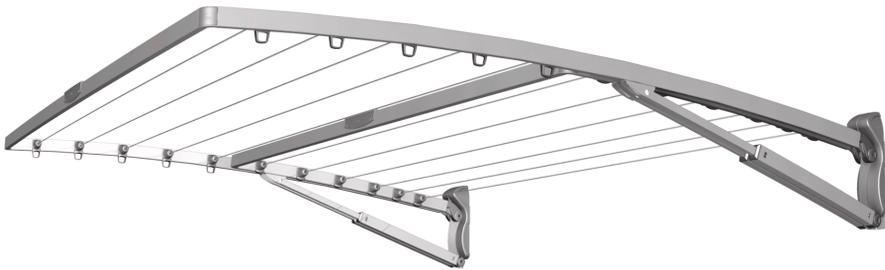

TO SUIT MODELS:

Supa Fold 230 *Advantage*
Supa Fold 230
Supa Fold 210
Supa Fold 190
Supa Fold 120
Supa Fold 70

Strut Assembly pack contains

Description	Qty.
Strut Assembly	2

Please retain this Product Manual. Record the following information for future reference.

Product Number (printed on label): FD

Date of purchase:

Name and location of store:

.....



Designed and tested under a Quality System that meets Hills demanding quality specifications.

Made in China





Strut Assembly Replacement

To replace:

1. Lower the frame to its folded position.
2. Using two 5mm Hex Keys, loosen and remove the Fasteners and Black Washers securing the RH Strut Assembly to the Pivot Bracket. See **Fig. 1**.

Take note of the position of the Black Washers inside of the Pivot Bracket for re-assembly. See **Fig. 2**.

3. Using a 6mm Hex Key, remove the Small Bayonet Cap securing the old Strut Assembly to the Wall Bracket. See **Fig. 3**.
4. Remove the old Strut Assembly and install the new Strut Assembly to the Wall Bracket, securing with the Small Bayonet Cap. See **Fig. 4**.
5. Using two 5mm Hex Keys, secure the new Strut Assembly to the Pivot Bracket using the Fasteners and Black Washers. See **Fig. 1**.
6. Repeat **steps 2 to 5** for the LH Strut Assembly.
7. Raise the frame to its locked position.

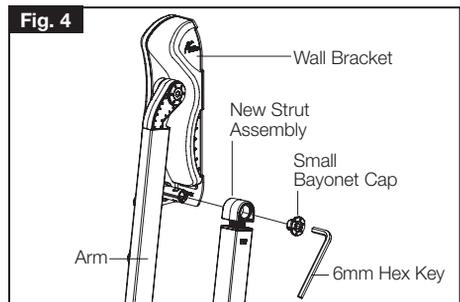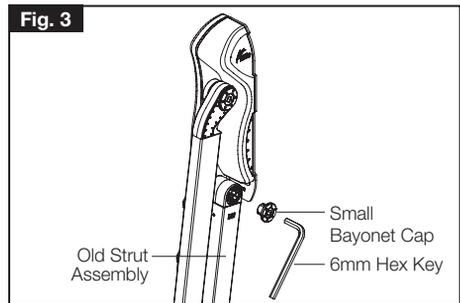
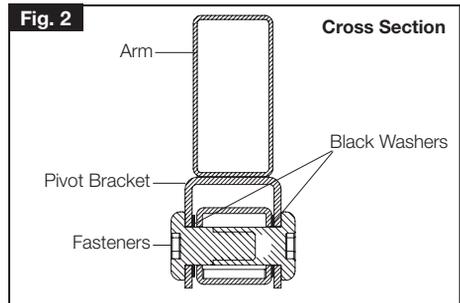
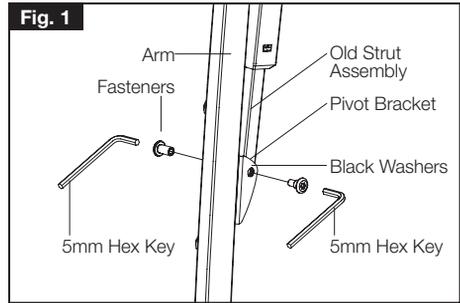


Strut Assembly Adjustment

Your new Strut Assembly allows you to adjust the individual Arm heights of your folding frame. This is useful to level the front Spreader or to align the inner and outer frames on dual frame models.

To adjust:

1. Identify the Arm you want to raise, then lower the frame to its folded position.
2. Using a 6mm Hex Key, remove the Small Bayonet Cap securing the Strut Assembly to the Wall Bracket. See **Fig. 5**.
3. Remove the Strut Assembly from the Wall Bracket. You do not need to remove the Strut Assembly from the Arm.
4. Unscrew the Adjuster to suit the amount of height adjustment required and then re-attach it to the Wall Bracket. See **Fig. 6**.
5. Raise the folding frame to its locked position and check the height of the adjusted arm.
6. If you are satisfied with the adjustment, replace the Small Bayonet Cap using a 6mm Hex Key. See **Fig. 5**.
7. If more adjustment is required, repeat **steps 3 to 6**.
8. Ensure you do not unscrew the Adjuster past the indicator (10mm). See **Fig. 7**.

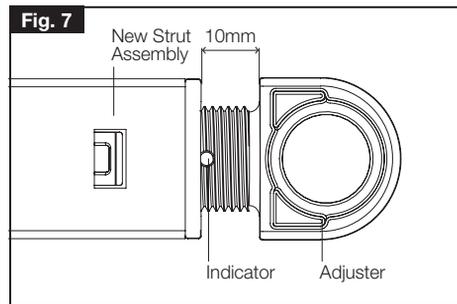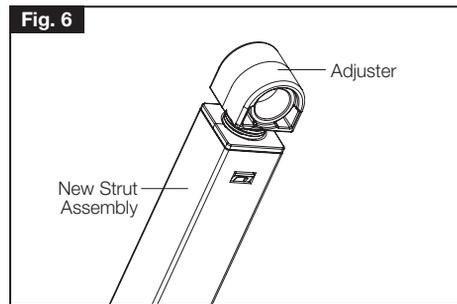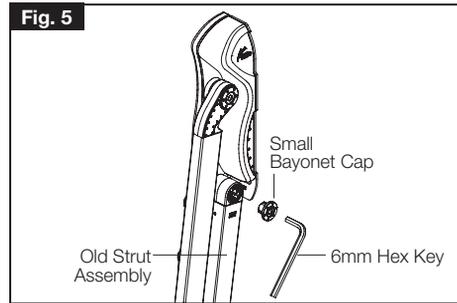

Hills Warranty

1. Hills provides consumers with the following warranty in relation to this Product, in addition to complying with the requirements of any relevant legislation, including the Competition and Consumer Act 2010 (Cth) in Australia and the Consumer Guarantees Act 1993 in New Zealand (the **Acts**), except where a New Zealand consumer acquires the relevant Product for the purposes of a business.
2. In this warranty, we have used the following definitions:
 - (a) **Hills, our or we** means Hills Holdings Limited (ABN 35 007 573 417) of 159 Port Road Hindmarsh South Australia 5007;
 - (b) **Products** means the following goods manufactured by Hills (including products manufactured for Hills by its contract manufacturers): **Hills Supa Fold Folding Frame Clothesline Strut Assembly Pack**;
 - (c) **Material** means a material or component used by Hills in the manufacture of the Products;
 - (d) **Warranty Period** means 1 year from the date of purchase of the relevant Product. If the Product or part (as the case may be) is repaired or replaced, there will be no extension to the original warranty period; and
 - (e) **Workmanship** means the handling, assembly and manufacturing processes performed by or on behalf of Hills in order to manufacture the Products.
3. Hills warrants that for the duration of the Warranty Period, all Products will be free of faults arising from defects in Workmanship or Materials, on the terms and conditions set out in this warranty.
4. Hills undertakes that if during the Warranty Period any Product, or any part of a Product, has failed to operate correctly due to faulty Workmanship or defective Material, it will repair or replace the Product or part (as the case may be) free of charge provided that the following procedure is met:
 - (a) The consumer must contact Hills upon becoming aware of any defect to a Product. The contact details for Hills are set out in this warranty and under the heading "Hills Contacts".
 - (b) Following consultation with Hills, Hills will determine whether there is a defect, and if so Hills agrees to (at Hills' option):
 - i. in the case of goods – repair, replace or supply equivalent goods, or pay the cost of any of those remedies to the consumer; or
 - ii. in the case of services – supply the services again or pay the cost of having the services supplied again.
 - (c) If Hills requests the return of the applicable Product or part, Hills will be responsible for the collection and freight costs of returning that Product or part. The consumer agrees to assist Hills with any reasonable request to enable Hills to collect such Product or part.
 - (d) Hills also agrees to be responsible for the freight costs to deliver any new Product or replacement part to the consumer.

Warranty

5. This warranty is in addition to any non-excludable legal rights or remedies conferred on the consumer under any applicable Act and any similar laws. To the extent permitted by law, Hills' liability for any non-excludable condition or warranty is limited to rectifying any defect at its option, as set out in paragraph 4(b).
6. Subject to the requirements of any applicable Act or legislation and to the extent permitted by law, no liability (whether expressed or implied) of any nature whatsoever, is accepted by Hills for any consequential loss, damage or injury arising as a result of any fault in the Products.
7. This warranty does not extend to damage to Products which occurs during transit or transportation, or which is caused by any abuse, accident or improper installation, connection, use, adjustment or repair or use of goods otherwise than in accordance with instructions issued by Hills.
8. The warranty on Products is waived if any addition or attachment to the Products do not have Hills' specific approval or are not sold as Hills products. The Products are designed to perform specific tasks under established test loads and unauthorised attachments may produce stresses for which the design is not appropriate.
9. The following applies to consumers who purchased a relevant Product in Australia:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.
You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Hills Contacts

We are committed to providing you with complete customer satisfaction. If you have any questions or comments about our products or services please contact your nearest customer service centre during their local business hours:

Australia

1300 300 564
info@hills.com.au

New Zealand

09 262 3052
sales@hills.co.nz

United States

877 534 1371 (Eastern)
gsutterlin@verizon.net

Europe

+44 (0) 118 973 8971 (UK)
enquiries@greenergardensolutions.co.uk

South Africa

021 442 1540
info@stingray.co.za

Hills Websites

www.hills.com.au
Hills Branded Products

www.hillsholdings.com.au
Hills Holdings Limited



Hills Holdings Limited

A.B.N. 35 007 573 417

Issue January 2012

PD1944c